

**AN 2101-01 How to set output blocks of same data**

If you want to route a DMX data slot to multiple DMX output slots (e.g. DMX Input slot 1 to output slots 1,2,3 and 4 and DMX Input slot 2 to output slots 5,6,7, and 8 pls configure the unit as follows:

1. Connect the RDM programmer to DMX IN (can be removed after programming)
2. Connect the DMX control desk to DMX CTL input
3. Connect the output to DMX OUT

We will use the control input as DMX signal input. This is scaling the main input, which has no DMX signal. To make it scaleable, we must artificially set all DMX data to „full“. To do so, set the DMX HOLD mode to „all Outputs ON“.

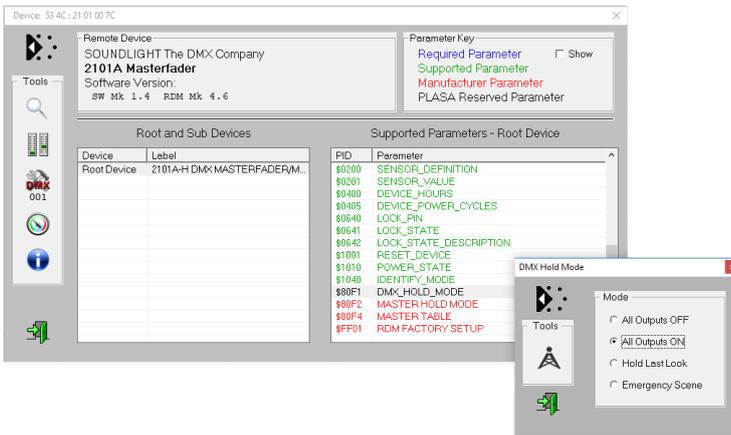


Fig.1 Setting DMX HOLD on main Input

In order to shut off all outputs reliably when no DMX desk is connected, or when it is unplugged, set the Control Input Hold (MASTER HOLD MODE) to „All off“, which is parameter „00“.

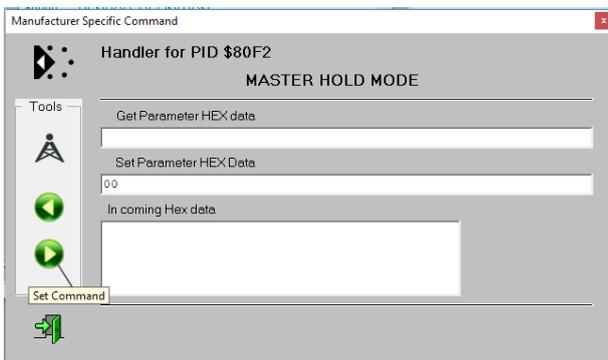


Fig. 2 Setting the MASTER HOLD to „00“

Now the DMX outputs must be assigned. This can be done using the MASTER TABLE function. By default, all DMX output slots are set to be controlled from DMX MASTER slot #1, thus all outputsd slots wikk respond to DMX fader 1.

We can easily remove this re-assigning all slots to control address 255:

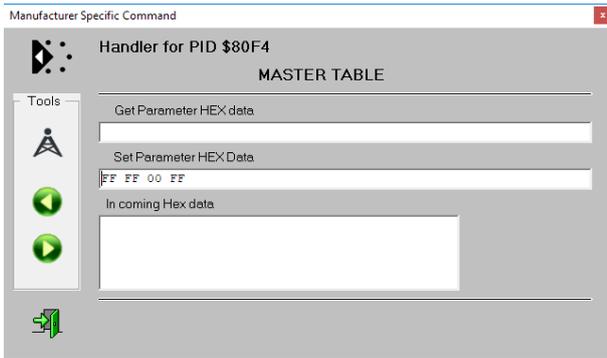


Fig. 3  
Re-Setting all outputs to #255

Now the individual entries can be made.

Type in the output address, then the input (source) address and then press the SET COMMAND button. Please note, that all entries must be made in *hexadecimal* format. Eventually, use a tool like the Windows Calculator to convert from decimal to hexadecimal format.

00 01	00 01	<set>	connects DMX OUT 1 to DMX IN 1
00 02	00 01	<set>	connects DMX OUT 2 to DMX IN 1
00 03	00 01	<set>	connects DMX OUT 3 to DMX IN 1
00 04	00 01	<set>	connects DMX OUT 4 to DMX IN 1
00 05	00 02	<set>	connects DMX OUT 5 to DMX IN 2
00 06	00 02	<set>	connects DMX OUT 6 to DMX IN 2
00 07	00 02	<set>	connects DMX OUT 7 to DMX IN 2
00 08	00 02	<set>	connects DMX OUT 8 to DMX IN 2
00 09	00 03	<set>	connects DMX OUT 9 to DMX IN 3
00 0A	00 03	<set>	connects DMX OUT 10 to DMX IN 3
00 0B	00 03	<set>	connects DMX OUT 11 to DMX IN 3
00 0C	00 04	<set>	connects DMX OUT 12 to DMX IN 4
00 0D	00 05	<set>	connects DMX OUT 13 to DMX IN 5
00 0E	00 05	<set>	connects DMX OUT 14 to DMX IN 5
00 0F	00 05	<set>	connects DMX OUT 15 to DMX IN 5
00 10	00 05	<set>	connects DMX OUT 16 to DMX IN 5
00 11	00 0B	<set>	connects DMX OUT 17 to DMX IN 11
00 12	00 0B	<set>	connects DMX OUT 18 to DMX IN 11

Please note: The DMX CTL input is limited to 255 data slots.